



## SR20 FWD Crank Only 36-2 Sensor Kit


### Parts

ATI Damper with 36-2 Teeth

Magnetic Pickup Sensor with Bracket and Hardware

### Instructions

1. Before installing pulley, grind the ribs on the front cover to clear the bracket and sensor.

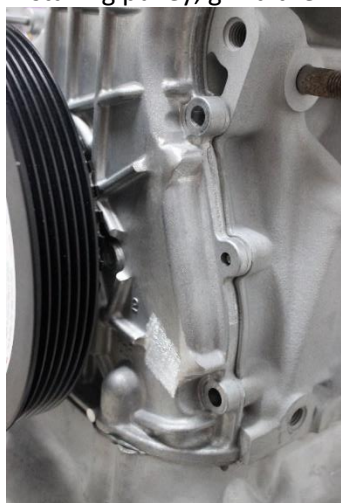

2. Install pulley, crank sensor bracket and the **Magnetic Sensor**.

