




S14 Harness Bar Installation Instructions MAZ 10111


Parts Inventory

- (1) Main Harness Bar
- (2) Struts
- (2) Rod Ends, CM-7 (2)
- (2) Rod Ends, CB-6 (2)
- (2) Nuts, Jam, 3/8-24 LH (2)
- (2) Nuts, Jam, 7/16-20 (2)
- (2) Bolts, 3/8-24 x 1-1/4" (2)
- (2) Bolts, 7/16-20 x 2" (2)
- (4) Washers, 7/16" (4)
- (2) Washers, 3/8" (2)
- (2) Nuts, Nyloc, 3/8-24 (2)

1. Remove both seats.
2. Remove the bottom bolt of the factory seat belt on both sides.
3. Remove the right and left upper seat belts and interior panel that surrounds the rear quarter glass.
4. Remove the 7/16 bolt that holds on the seat belt slider rail on both sides.
5. Take the main harness bar, with the seat belt guards on the top side, and slide the plate and line the holes up.
6. Install the factory 7/16 bolts back in and leave them finger tight.
7. Assemble the struts by first threading on a jam nut on the respective rod end. Then thread the rod end in the strut. (Note: one side the strut is a 3/8 **LEFT HAND** thread and the other side is a 7/16 **RIGHT HAND** thread)
8. Take the 7/16 bolt and (2) 7/16 washers supplied with the kit and install according to the picture.

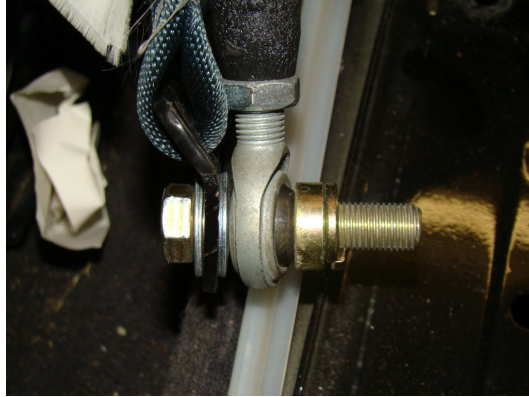

9. Now attach the 3/8 side of the strut accordingly. With the bolt, slide a washer on, put the bolt through the rod end, then slide the bolt through the tab on the flat side, then finally install the nut and tighten.

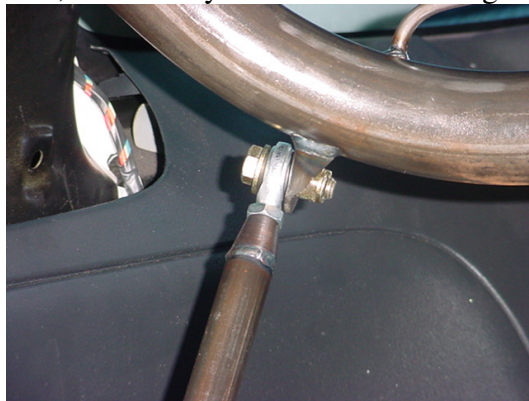

10. Adjust the harness bar by rotating the strut. Once in position, tighten all four jam nuts.
11. Now tighten the 7/16 bolts on the plates.
12. You will have to trim the interior panels for clearance before reinstalling them.



13. Reinstall the seats.

Your installation is complete!

More pictures

